


Description

SIM900A Modem is built with Dual Band GSM/GPRS based SIM900A modem from SIMCOM. It works on frequencies 900/ 1800 MHz. SIM900A can search these two bands automatically. The frequency bands can also be set by AT Commands. The baud rate is configurable from 1200-115200 through AT command. The GSM/GPRS Modem is having internal TCP/IP stack to enable you to connect with internet via GPRS. SIM900A is an ultra compact and reliable wireless module. This is a complete GSM/GPRS module in a SMT type and designed with a very powerful single-chip processor integrating AMR926EJ-S core, allowing you to benefit from small dimensions and cost-effective solutions.

Specification

- Dual-Band 900/ 1800 MHz
- GPRS multi-slot class 10/8GPRS mobile station class B
- Compliant to GSM phase 2/2+
- Dimensions: 24*24*3 mm
- Weight: 3.4g
- Control via AT commands (GSM 07.07 ,07.05 and SIMCOM enhanced AT Commands)
- Supply voltage range : 5V
- Low power consumption: 1.5mA (sleep mode)
- Operation temperature: -40°C to +85 °

Step 1: Material Preparation

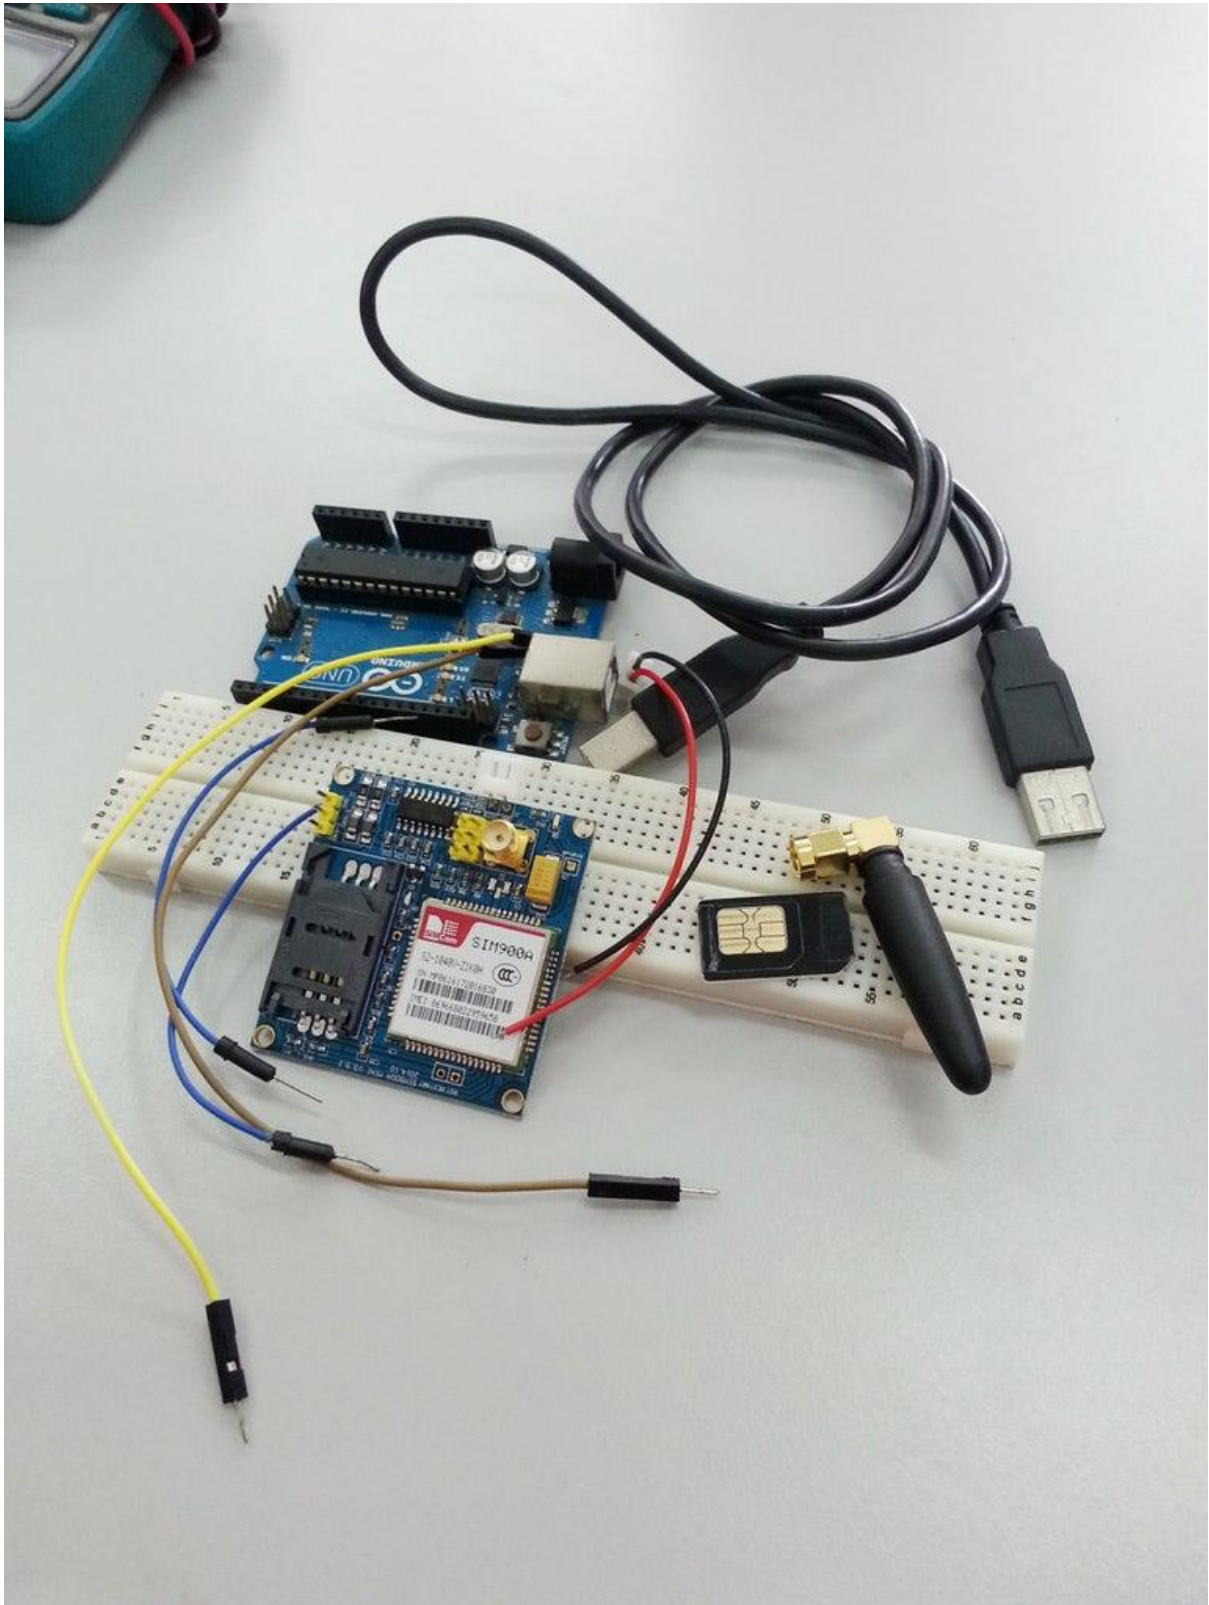


In this tutorial, you will need :


1. GSM SIM900A (MINI V3.9.2)
2. Arduino Uno Board and USB
3. Jumper Wire
4. Power adapter 5V
5. SIM card
6. Breadboard






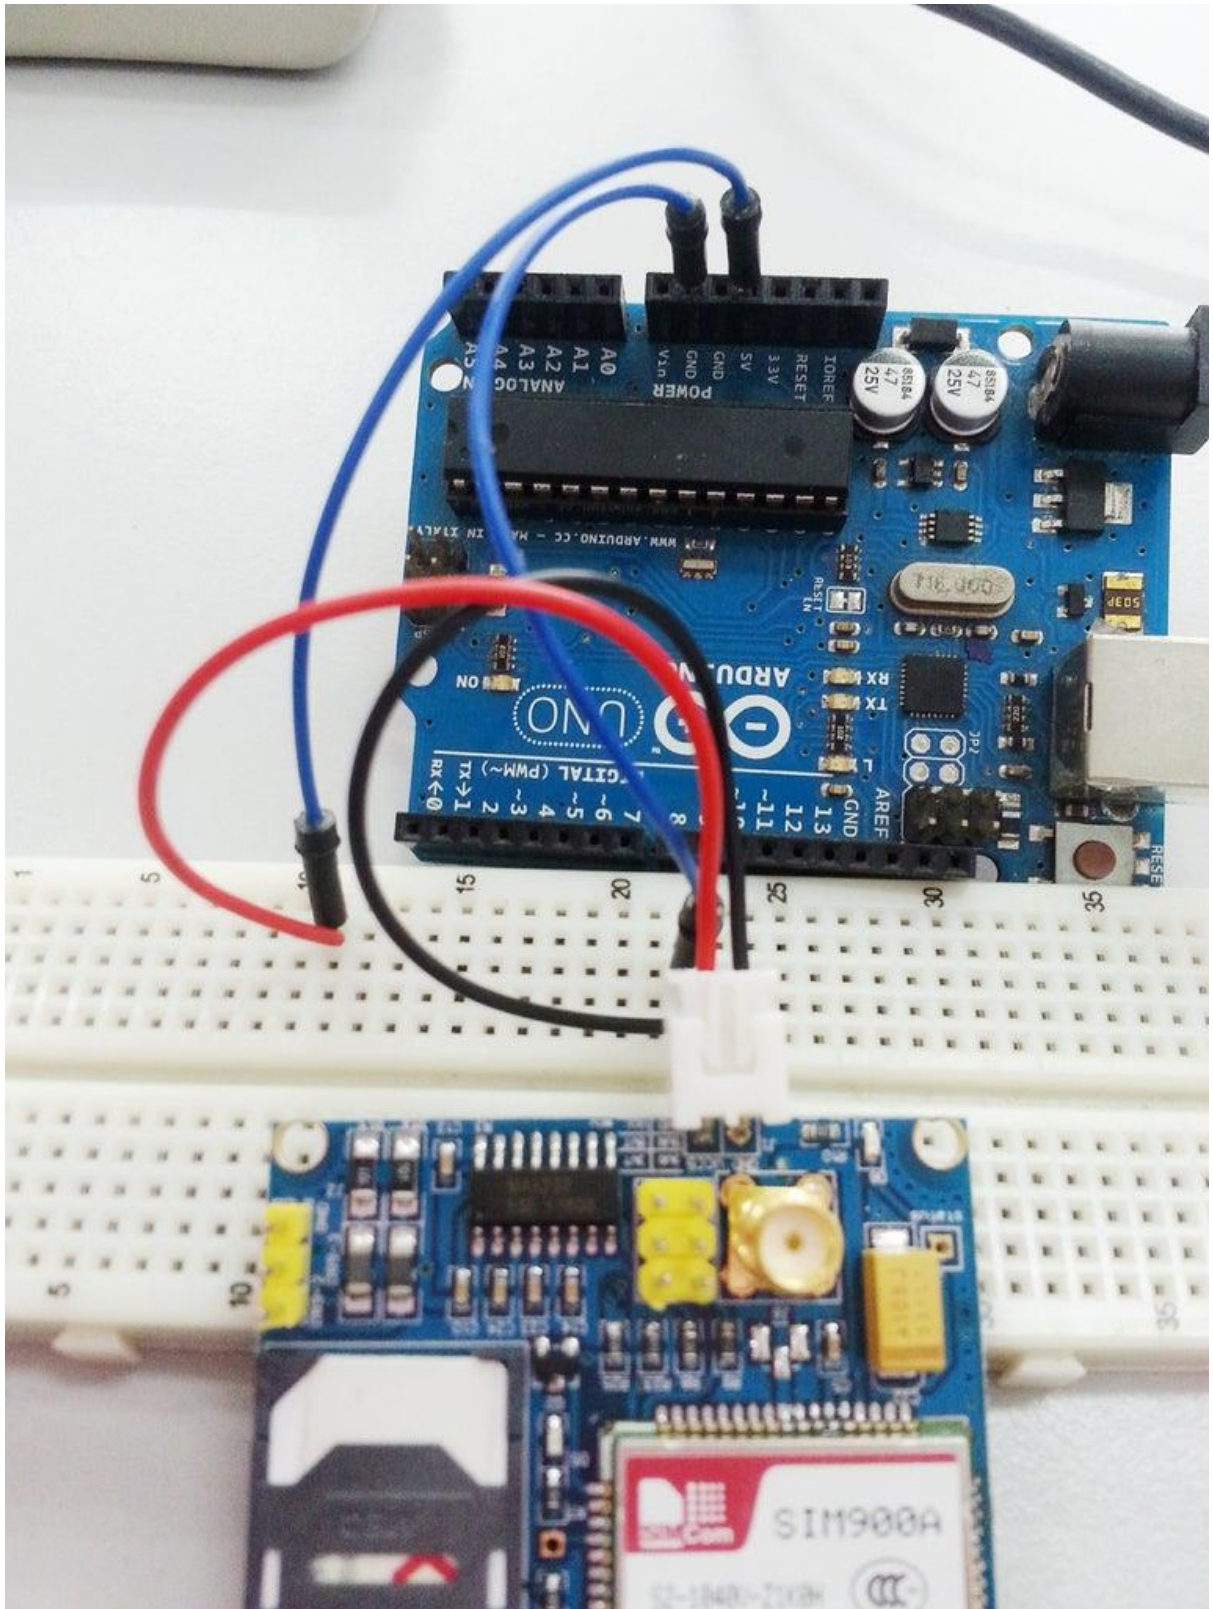

1. Insert your SIM card to GSM module and lock it. (picture 1 and 2)
2. power up your gsm by connecting it to Arduino's 5V and GND (picture 3)
3. Connect the Antenna (picture 4)
4. Now wait for some time (say 1 minute) and see the blinking rate of 'status LED' or 'network LED' (D6, refer picture 5) //GSM module will take some time to establish connection with mobile network//
5. Once the connection is established successfully, the status/network LED will blink continuously every 3 seconds. You may try making a call to the mobile number of the sim card inside GSM module. If you hear a ring back, the gsm module has successfully established network connection.

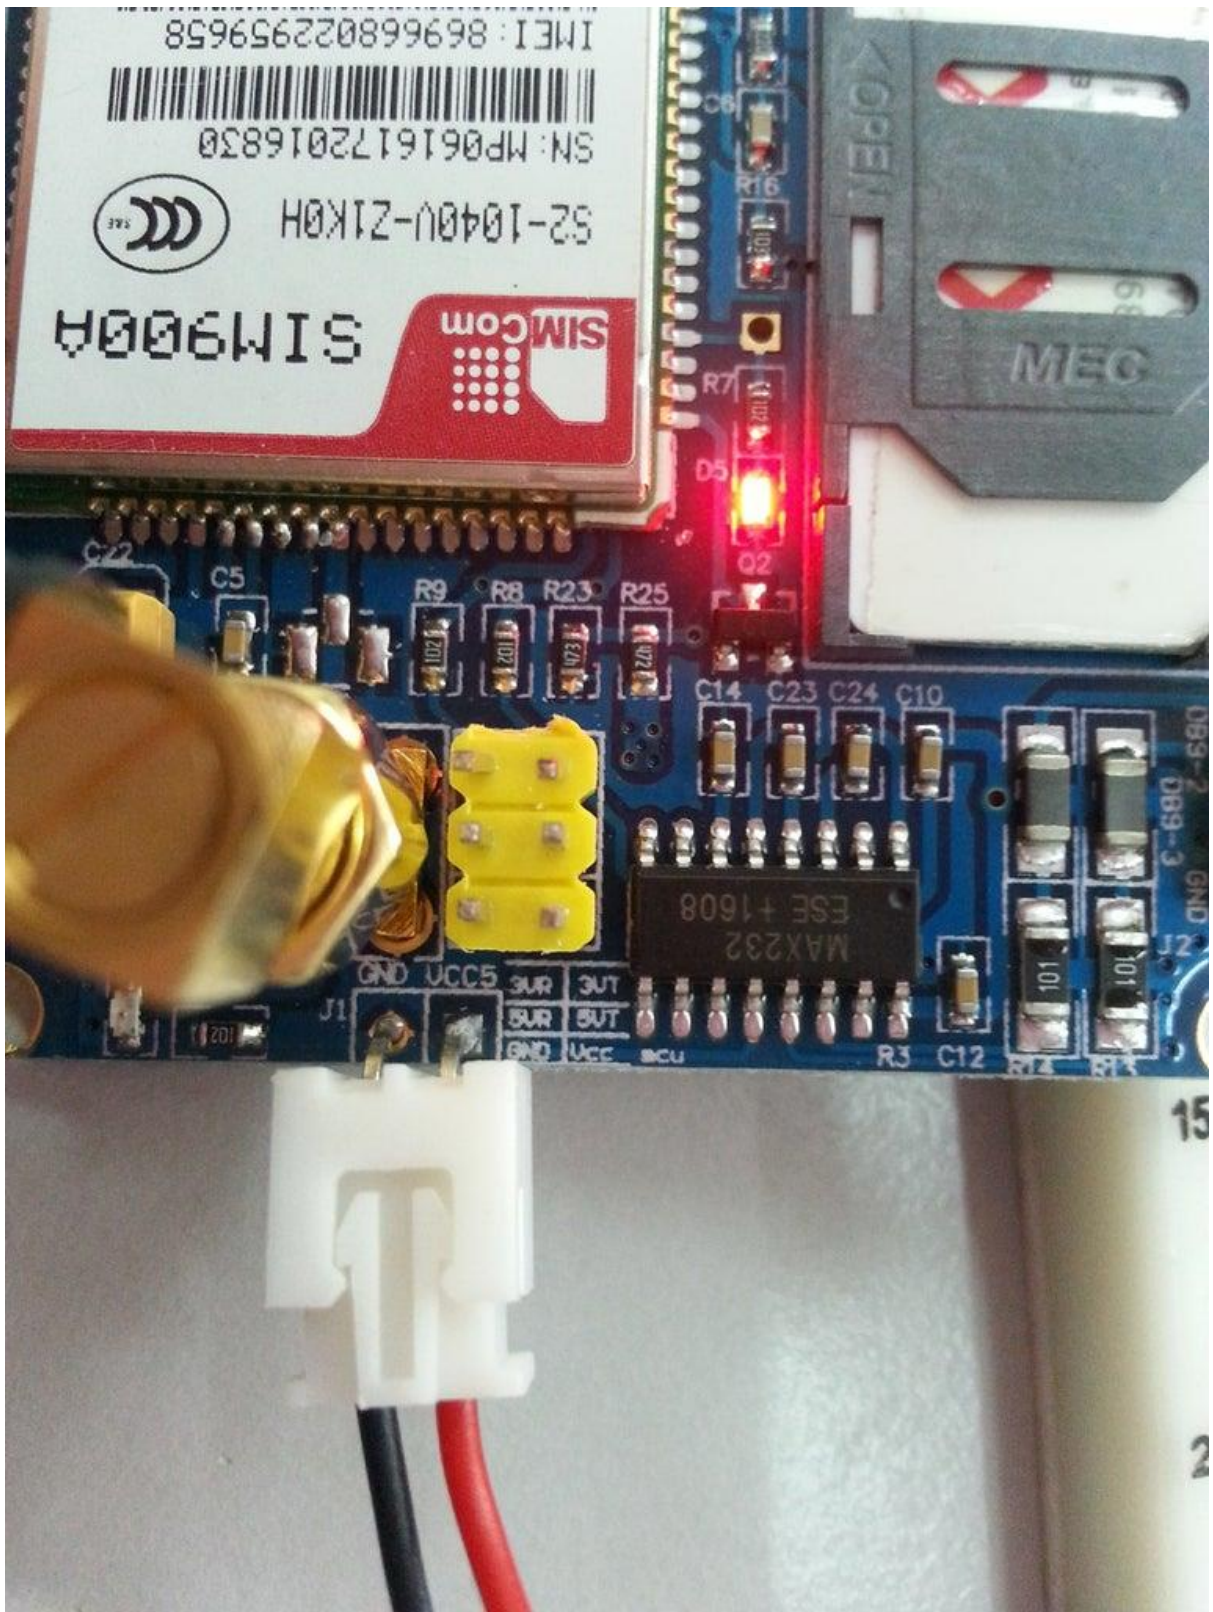

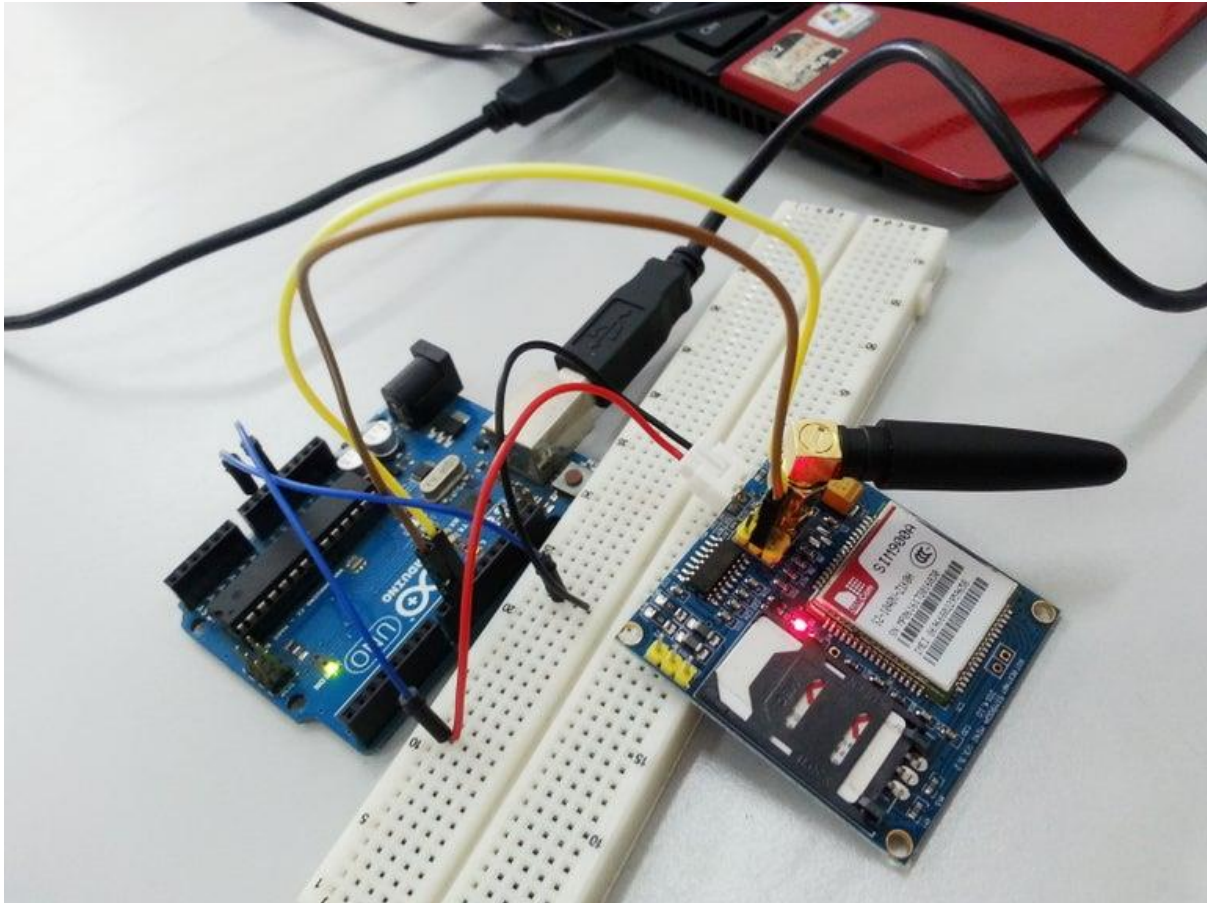

You can see a TTL pin with 3VR, 3VT, 5Vr, 5VT, VCC and GND on your sim900a near your power supply pin. You have to connect **GSM's 5VT to Arduino D9** and **GSM's 5VR to Arduino's D10** for serial communication between arduino and sim900a module.

Step 4: Basic AT Command

1. To change sms sending mode : **AT+CMGF=1**

```
mySerial.println("AT+CMGF=1");
```

2. To read SMS in text mode : **AT+CNMI=2,2,0,0,0**

```
mySerial.println("AT+CNMI=2,2,0,0,0");
```

3. To make a call : **ATD+60XXXXXXXXXX;** //replace X with number you want to call, change +60 to your country code

```
mySerial.println("ATD+60XXXXXXXXXX;");
```

4. To disconnect / hangup call : **ATH**

```
mySerial.println("ATH");
```


5. To redial : **ATDL**

```
mySerial.println("ATDL");
```

6. To receive a phone call : **ATA**


```
mySerial.println("ATA");
```

Step 5: Library

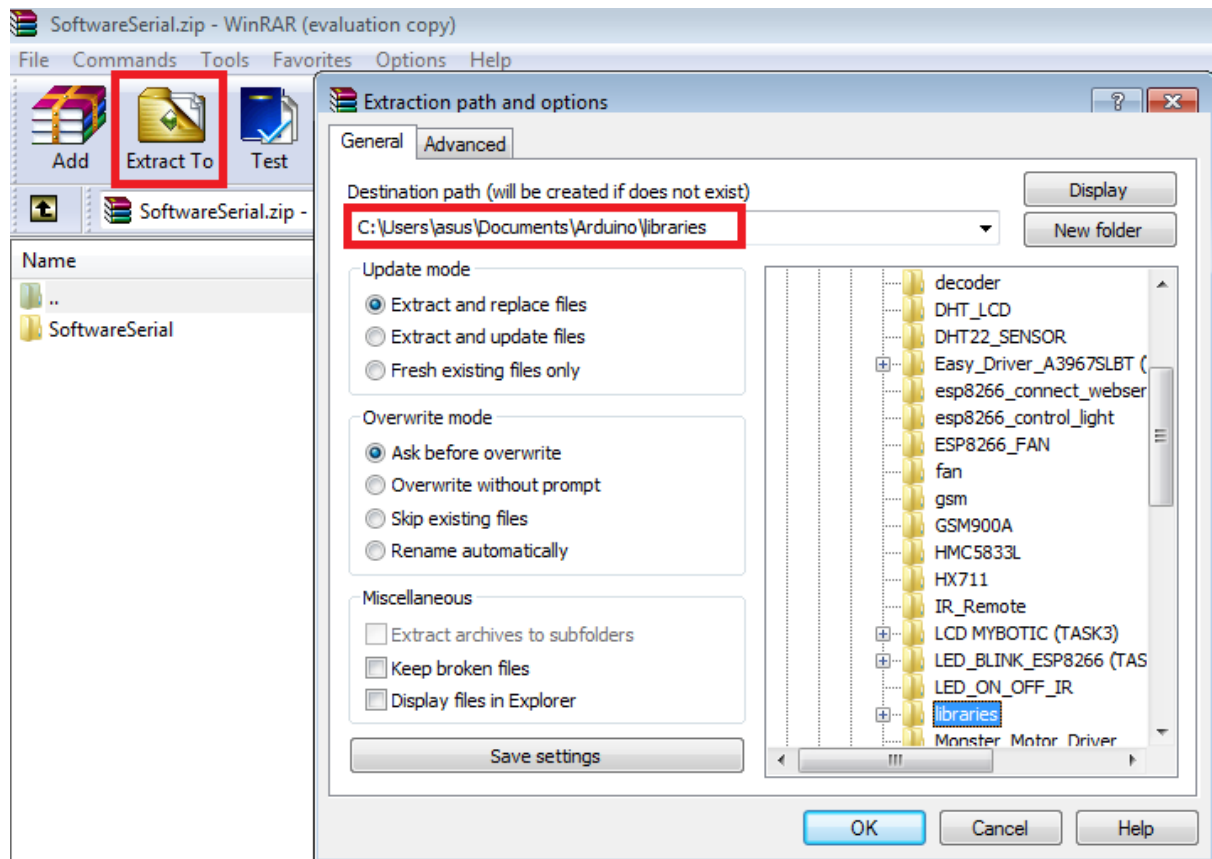


SoftwareSerial is a library of Arduino which enables serial data communication through other digital pins of Arduino. The library replicates hardware functions and handles the task of serial communication. To be able to interface gsm module with arduino, you will have to download this library and extract it into your Arduino's libraries.

Software Serial.zip attached

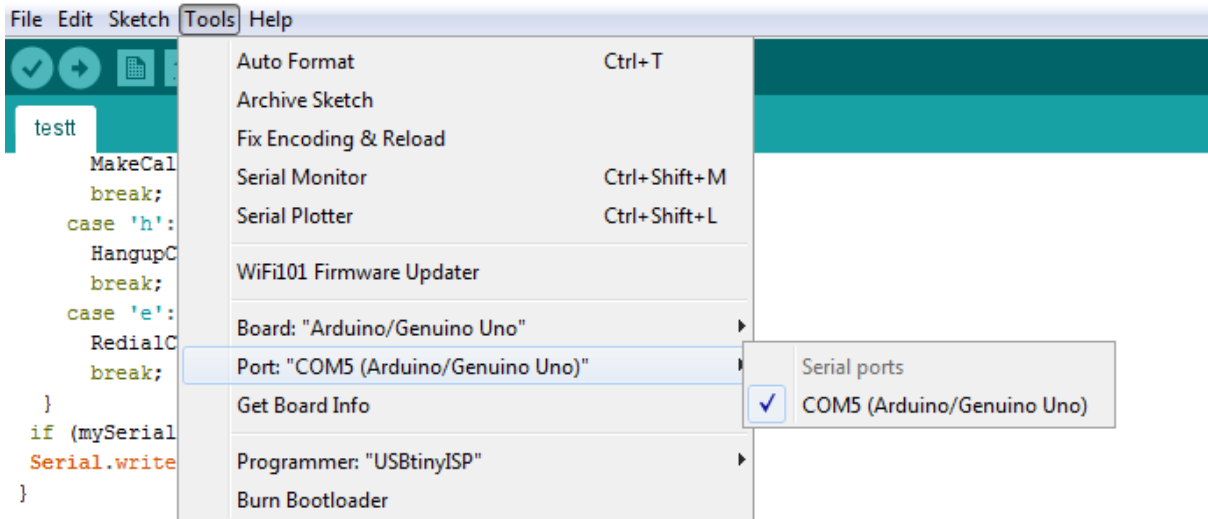

```
void SendMessage()
{
  mySerial.println("AT+CMGF=1"); //Sets the GSM Module in Text Mode
  delay(1000); // Delay of 1000 milli seconds or 1 second
  mySerial.println("AT+CMGS="+60137467425+"\r"); // Replace x with mobile number
  delay(1000);
  mySerial.println("sim900a sms");// The SMS text you want to send
  delay(100);
  mySerial.println((char)26);// ASCII code of CTRL+Z
  delay(1000);
}
```

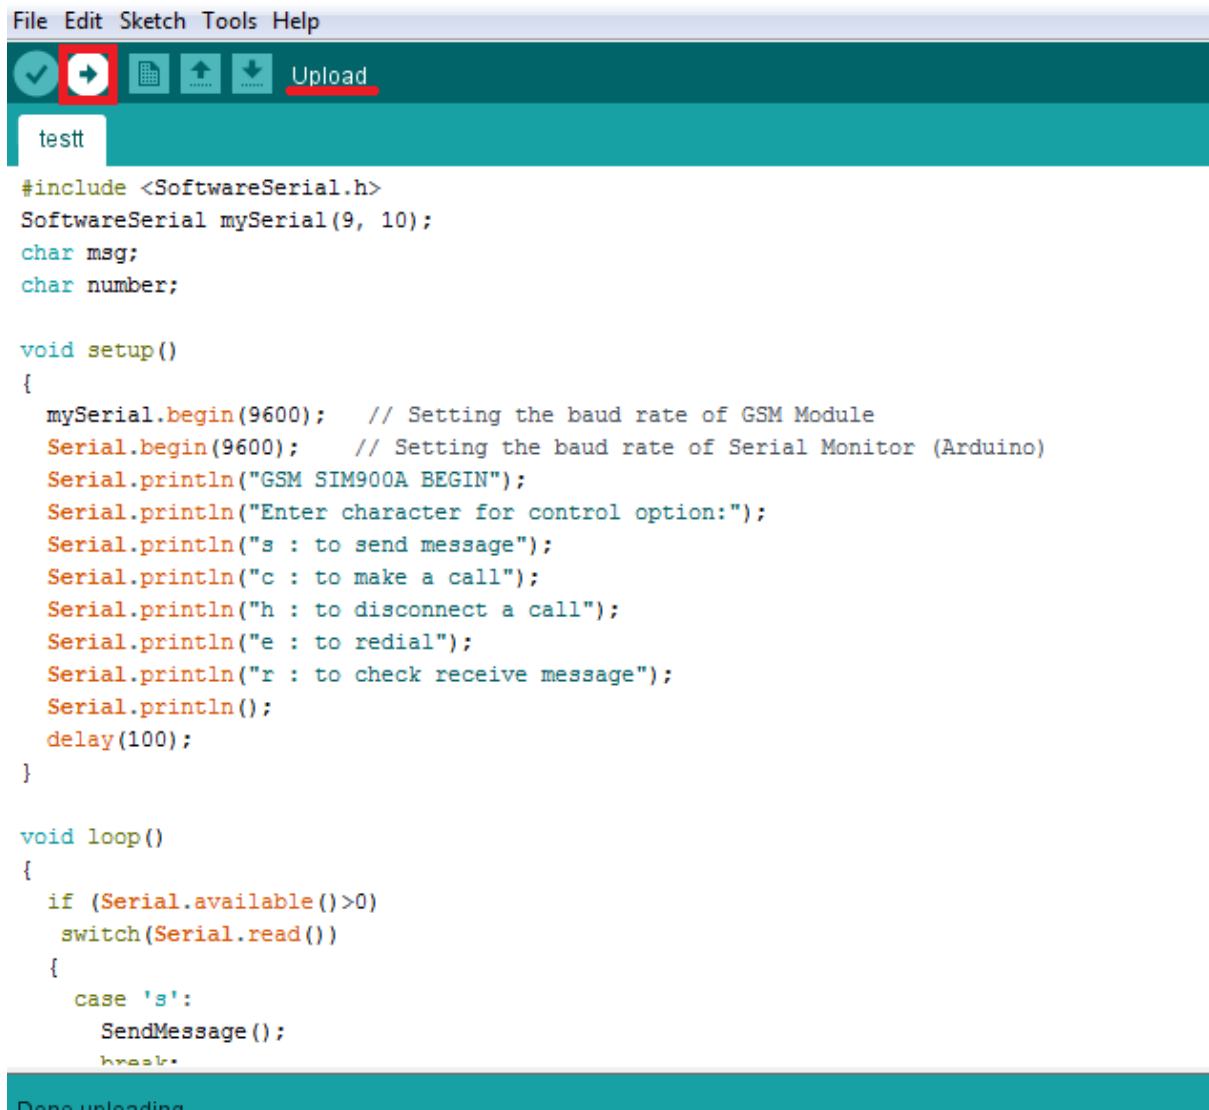



```
File Edit Sketch Tools Help
testt
#include <SoftwareSerial.h>
SoftwareSerial mySerial(9, 10);
char msg;
char number;

void setup()
{
  mySerial.begin(9600); // Setting the baud rate of GSM Module
  Serial.begin(9600); // Setting the baud rate of Serial Monitor (Arduino)
  Serial.println("GSM SIM900A BEGIN");
  Serial.println("Enter character for control option:");
  Serial.println("s : to send message");
  Serial.println("c : to make a call");
  Serial.println("h : to disconnect a call");
  Serial.println("e : to redial");
  Serial.println("r : to check receive message");
  Serial.println();
  delay(100);
}

void loop()
{
  if (Serial.available()>0)
  switch(Serial.read())
  {
  case 's':
    SendMessage();
    break;
  }
```


Download the sample source code below and open it on your Arduino IDE. Select the correct board and port and upload it into your Arduino Uno Board.

[sim900amini.rar](#)

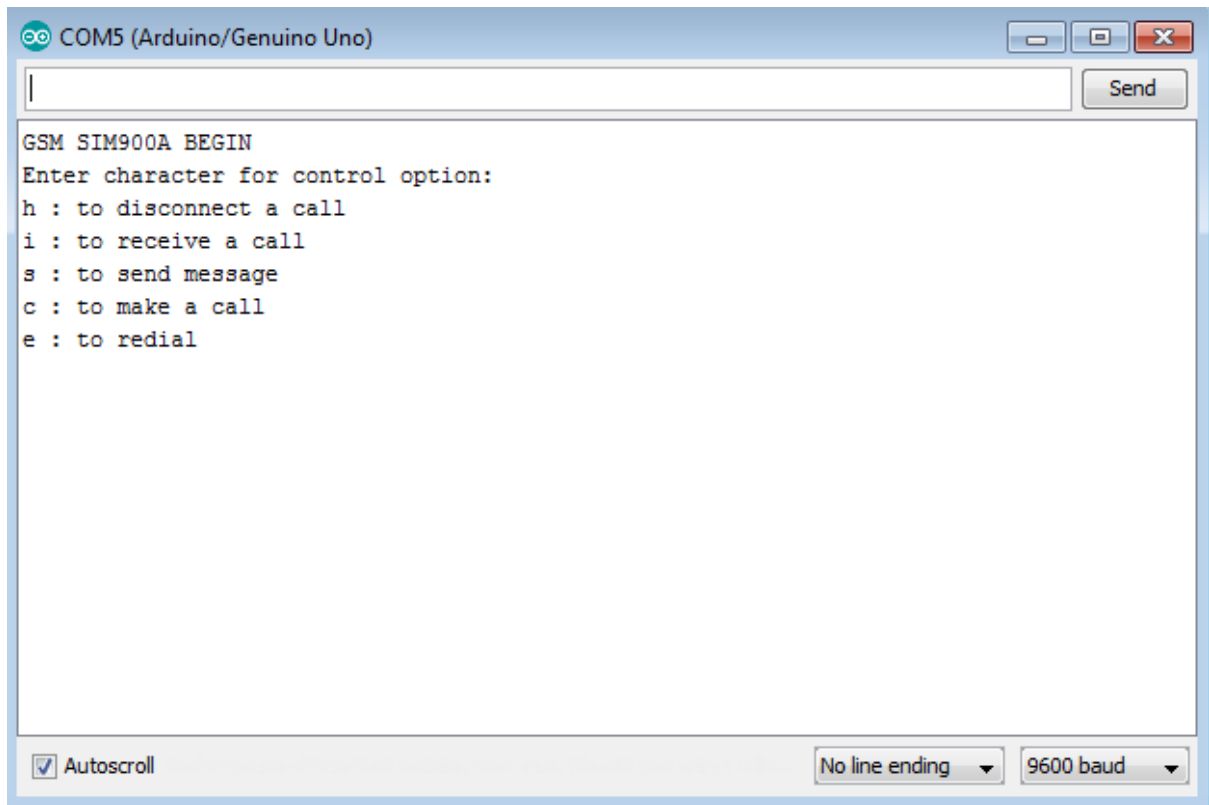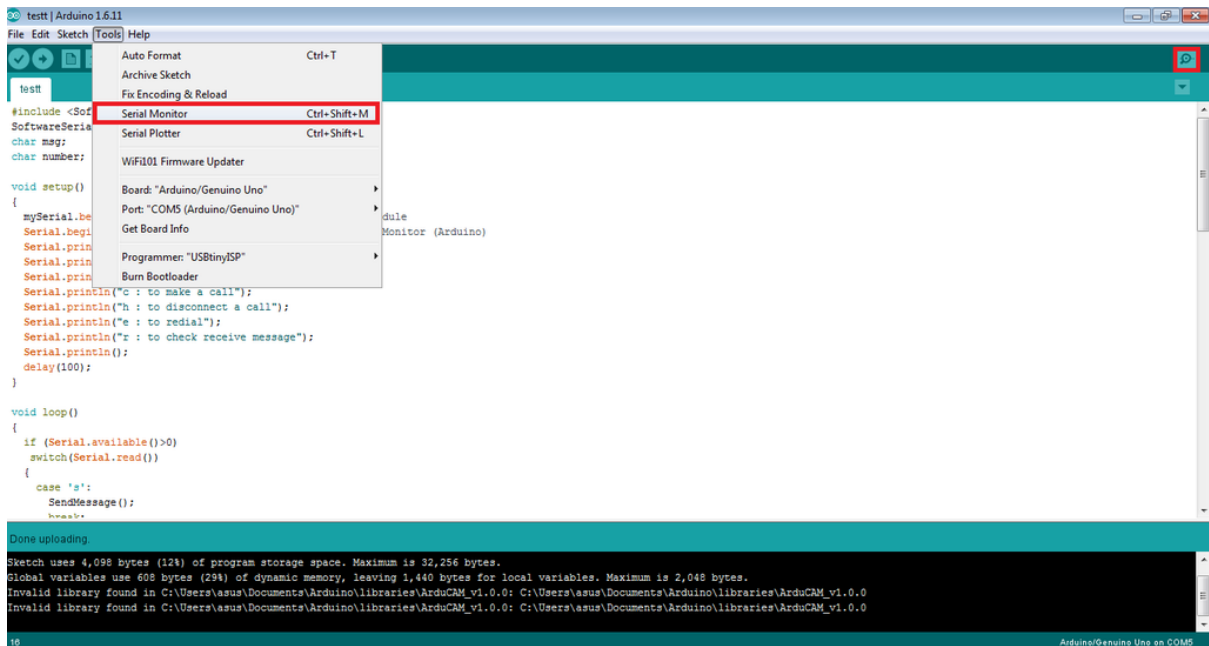

After you have successfully uploaded your source code, open your serial monitor. Serial monitor will display as shown in the picture above.

Step 8: Result : Call / Redial

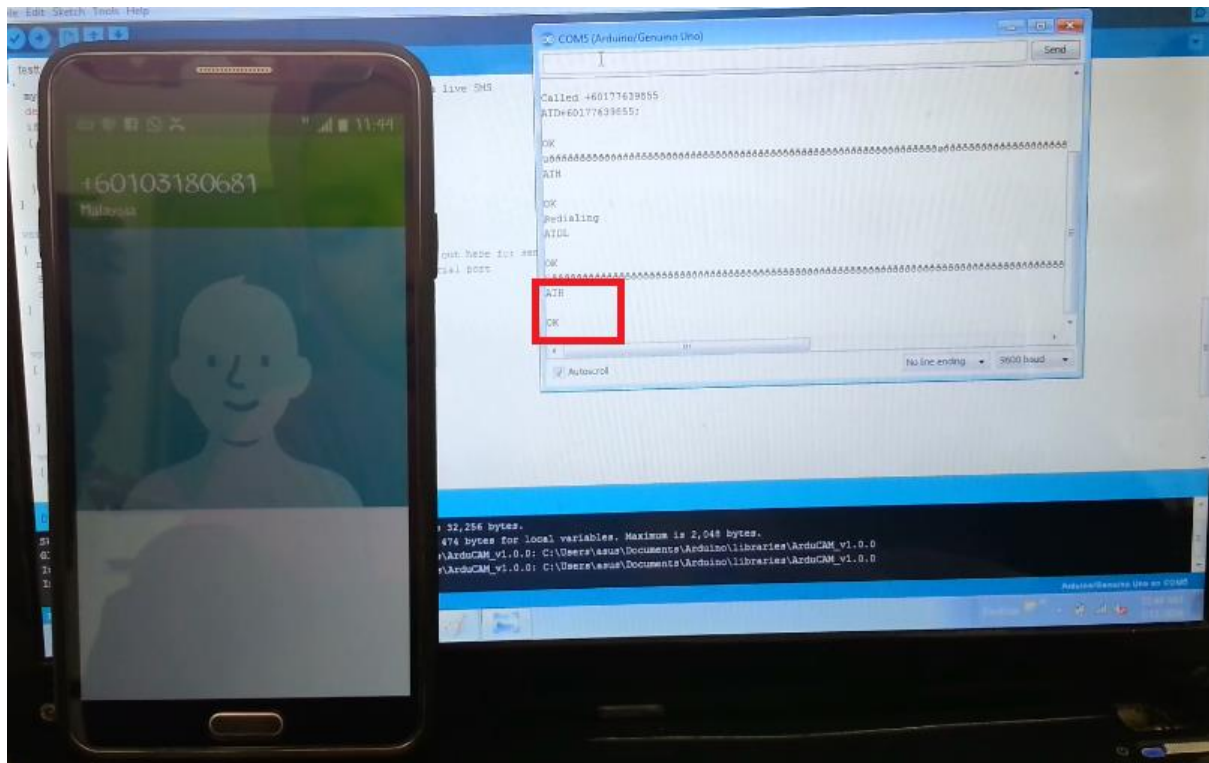

1. As you key-in **c** : **to make a call**, gsm will read the ATD command and make a call to a phone number you have upload in your source code. (Picture 1 and 2)
2. When you key-in **h** : **to disconnect/hangup call**, gsm will read the ATH command and disconnect the connection. (Picture 3)
3. When you key-in **e** : **to redial**, gsm will read the ATDL command and redialing previous number it has called.(Picture 4)
4. When there is an incoming call, you can see RING printed on serial monitor and you can click **i** : **to receive a call** and GSM's ATA command will be carried out and you will be connected to a call connection. (Picture 5)

Step 9: Result : Send and Receive SMS

