

SUP014 Two channel Remote control Kit

Programming of remote control button for mono-stable operation.

Remote control left button.

Press P1 on receiver unit once and release.

The LED will light 'up' then flash once and remain 'ON'

Press and hold button 'A' (left button) of the remote control to be programmed.

The LED will flash.

Release the button of the remote control.

Remote control right button.

Press P1 on receiver unit twice and release.

The LED will light 'up' on the first press. Continue with the second press.

The LED will flash two times and remain 'ON'

Press and hold button 'B' (right button) of the remote control to be programmed.

The LED will flash.

Release the button of the remote control.

Repeat the above procedure with remote controls as required.

Programming of remote control button for bi-stable operation.

Remote control left button.

Press P1 on receiver unit three times and release.

The LED will light 'up' on the first press. Continue with the second and third press.

The LED will flash three times and remain 'ON'

Press and hold button 'A' (left button) of the remote control to be programmed.

The LED will flash.

Release the button of the remote control.

Remote control right button.

Press P1 on receiver unit four times and release.

The LED will light 'up' on the first press. Continue with the second, third and fourth press.

The LED will flash four times and remain 'ON'

Press and hold button 'B' (right button) of the remote control to be programmed.

The LED will flash.

Release the button of the remote control.

Repeat the above procedure with remote controls as required.

Erasing of a single remote control unit.

Press P2 on the receiver unit for approx. 2 seconds.

Release P2.

The LED will light 'up'.

Press the button of the remote control to be deleted.

Erasing all remote control units.

Press and hold P2 until the LED lights 'up' (approx. 8 seconds)