

HY-CN02 Two channel Remote control Kit

Programming of remote control buttons.

Press P1 on the receiver as follows to select relay and function

Press 1 time and release to program Relay 1 to mono-stable mode.

Led will flash ON - OFF – ON

OR

Press 2 times and release to program Relay 2 to mono-stable mode.

Led will flash ON - OFF - ON - OFF - ON

OR

Press 3 times and release to program Relay 1 to bi-stable mode.

Led will flash ON - OFF - ON - OFF - ON - OFF - ON

OR

Press 4 times and release to program Relay 2 to bi-stable mode.

Led will flash ON - OFF - ON - OFF - ON - OFF – ON – OFF - ON

Press and hold button 'A' (left button) on the remote control.

The Led on the receiver will flash and go OFF.

Repeat the above to button 'B'.

Repeat again for other remote controls.

Erasing of a single remote control button.

Press and hold P2 on the receiver unit for approx. 3 seconds.

Release P2.

The LED will light 'up'.

Press the button of the remote control button to be deleted.

Erasing all remote control units.

Press and hold P2 on the receiver unit for 4 seconds.